


- 1 Prepare parts: Please sand all blue surfaces and delete all details
- 2 Paint all of the parts and cockpit.
- 3 Apply clear coat all of the surfaces that will applied 3D-Decals.
- 4 Cut the sticker with a scissor and separate the 3D-Decal part in warm water.
- 5 Remove any water with an earstick or a tissue.
- 6 You can apply CA glue to invisible spots if needed.

[www.babibimodel.com](http://www.babibimodel.com)

 Babibi TV


 groups/babibimodel

 Babibimodel

*Thank you for purchasing Babibi Model products.*


*Are you ready for realistic models?*

**1/32 Scale F-16D Block 30-40  
3D COCKPIT DETAIL SET  
B3D-0042**

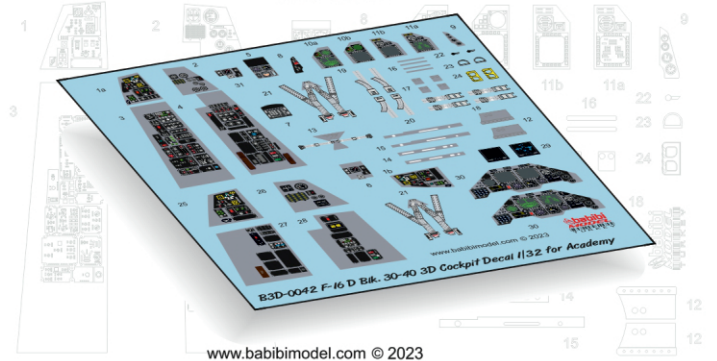

www.babibimodel.com © 2023

**For Academy  
1/32 Kits**

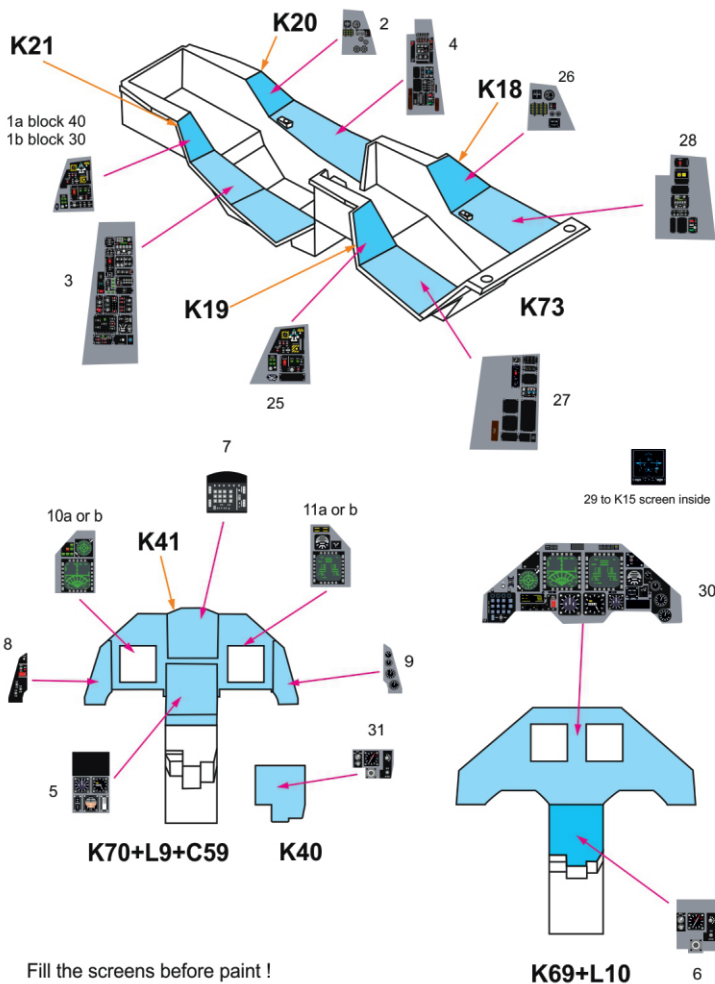

Fill the screens before paint !

Tip !: You can use 12,14,15,16,17 before painting.

