


- 1 Prepare parts: Please sand all blue surfaces and delete all details
- 2 Paint all of the parts and cockpit.
- 3 Apply clear coat all of the surfaces that will applied 3D-Decals.
- 4 Cut the sticker with a scissor and separate the 3D-Decal part in warm water.
- 5 Remove any water with an earstick or a tissue.
- 6 You can apply CA glue to invisible spots if needed.

www.babibimodel.com

 Babibi TV


 groups/babibimodel

 Babibimodel

Thank you for purchasing Babibi Model products.


Are you ready for realistic models?

1/32 Scale F-16D Block 50-52
3D COCKPIT DETAIL SET
B3D-0043

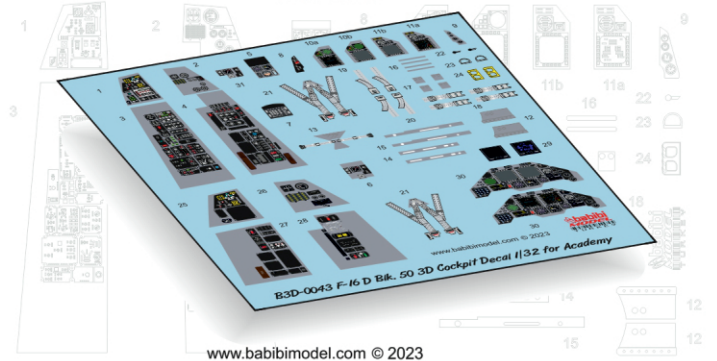

www.babibimodel.com © 2023

**For Academy
1/32 Kits**

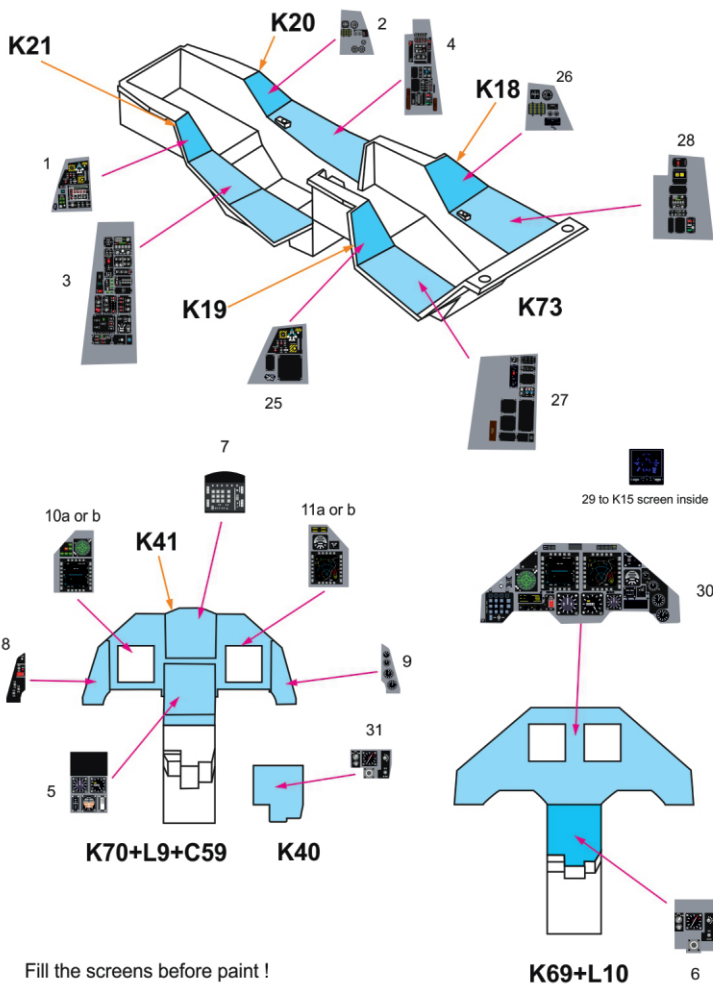

Fill the screens before paint !

Tip !: You can use 12,14,15,16,17 before painting.

