

*Are you ready for realistic models?*

- 1 Prepare parts: Please sand all of the surfaces and delete all details
- 2 Paint all of the parts and cockpit same as mentioned in the kit instructions
- 3 Apply clear coat all of the surfaces that will applied 3D-Decals.
- 4 Cut the sticker with a scissor and separate the 3D-Decal part in warm water.
- 5 Remove any water with an earstick or a tissue.
- 6 You can apply CA glue to invisible spots if needed.

[www.babibimodel.com](http://www.babibimodel.com)


[f groups/babibimodel](https://www.facebook.com/babibimodel)

[Babibi TV](https://www.youtube.com/channel/UCBabibiTV)

[Babibimodel](https://www.instagram.com/babibimodel)

*Thank you for purchasing Babibi Model products.*

*1/72 Scale Panavia Tornado IDS  
3D COCKPIT DETAIL SET  
B3D-0047*

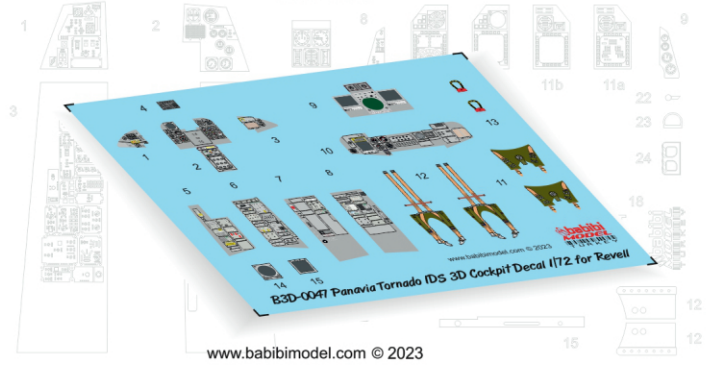

**For Revell  
1/72 Kits**

